

海华 Haihua F1600/F1300 泥浆泵配件

1	Клапан предохранительный резанного пальца HH-3-000-043 Haihua	Safety valve HH-3-000-043 Haihua	安全阀 HH-3-000-043 Haihua
2	Защита HH11309.03.011.094 Haihua	Protector HH11309.03.011.09 4 Haihua	保护器 HH11309.03.011.09 4 Haihua
3	Салазки верхние HH11309.04.002.104 Haihua	Upper slide HH11309.04.002.10 4 Haihua	Upper slide HH11309.04.002.10 4 Haihua
4	Коробка сальниковая HH11309.04.005.107 Haihua	Stuffing box HH11309.04.005.10 7 Haihua	填料盒 HH11309.04.005.10 7 Haihua
5	Болт крейцкопфный HH11309A.04.011.113 Haihua	Crosshead bolt HH11309A.04.011.1 13 Haihua	十字头螺栓 HH11309A.04.011.1 13 Haihua
6	Салазки нижние HH11309.04.013.115 Haihua	Lower slide HH11309.04.013.11 5 Haihua	Lower slide HH11309.04.013.11 5 Haihua
7	Штуцер HH11306.04.004.118 Haihua	Fitting HH11306.04.004.11 8 Haihua	Fitting HH11306.04.004.11 8 Haihua
8	Крышка клапанная HH11309A.05.012.130 Haihua	Valve cover HH11309A.05.012.1 30 Haihua	阀盖 HH11309A.05.012.1 30 Haihua
9	Шайба HH11309.05.026.133 Haihua	Washer HH11309.05.026.13 3 Haihua	垫片 HH11309.05.026.13 3 Haihua
10	Фланец крышки цилиндра HH11309.05.002.140 Haihua	Cylinder's head flange HH11309.05.002.14 0 Haihua	缸盖法兰 HH11309.05.002.14 0 Haihua
11	Фланец HH11309.05.015.152 Haihua	Flange HH11309.05.015.15 2 Haihua	法兰 HH11309.05.015.15 2 Haihua
12	Втулка ф180 HH11309.05.020.158 Haihua	Liner d180 HH11309.05.020.15 8 Haihua	缸套 d180 HH11309.05.020.15 8 Haihua
13	Шпилька HH11309A.05.01.005.167 Haihua	Threaded rod HH11309A.05.01.00 5.167 Haihua	螺杆 HH11309A.05.01.00 5.167 Haihua
14	Сборка поршня ф130	Piston assy d130	活塞总成 d130

4	HH207.0629.001 Haihua	HH207.0629.001 Haihua	HH207.0629.001 Haihua
1 5	Сборка поршня ф180 HH207.0629.006 Haihua	Piston assy d180 HH207.0629.006 Haihua	活塞总成 d180 HH207.0629.006 Haihua
1 6	Фланец HH05.04.177 Haihua	Flange HH05.04.177 Haihua	法兰 HH05.04.177 Haihua
1 7	Шпилька HH11309A.05.029.182 Haihua	Threaded rod HH11309A.05.029.182 Haihua	螺杆 HH11309A.05.029.182 Haihua
1 8	Манометр HH60.190 Haihua	Gauge HH60.190 Haihua	量具 HH60.190 Haihua
1 9	Сборка шестерни масляного насоса HH11306A.06.08.00.224 бурового насоса F1600/F1300 Haihua	Oil pump's gear assy HH11306A.06.08.00.224 for mud pump F1600/F1300 Haihua	油泵齿轮总成 HH11306A.06.08.00.224 用于泥浆泵 F1600/F1300 Haihua
2 0	Переходник резинового шланга HH11306.08.004.236 бурового насоса F1600/F1300 Haihua	Rubber hose adapter HH11306.08.004.236 for mud pump F1600/F1300 Haihua	橡胶软管适配器 HH11306.08.004.236 用于泥浆泵 F1600/F1300 Haihua
2 1	Насос центробежный брызгальный HH32PL.249 бурового насоса F1600/F1300 Haihua	Centrifugal spray pump HH32PL.249 for mud pump F1600/F1300 Haihua	离心喷雾泵 HH32PL.249 用于泥浆泵 F1600/F1300 Haihua
2 2	Труба фильтровальная HH11309.16.04.00.275 бурового насоса F1600/F1300 Haihua	Filtering pipe HH11309.16.04.00.275 for mud pump F1600/F1300 Haihua	过滤管 HH11309.16.04.00.275 用于泥浆泵 F1600/F1300 Haihua
2 3	Мешок колпака-компенсатора HH0628.207.012 бурового насоса F1600/F1300 Haihua	Cap-compensator bladder HH0628.207.012 for mud pump F1600/F1300 Haihua	空气包胶囊 HH0628.207.012 用于泥浆泵 F1600/F1300 Haihua
2 4	Стержень поршневой HH0628.207.019 Haihua	Piston rod HH0628.207.019 Haihua	活塞杆 HH0628.207.019 Haihua
2 5	Пружина HH0628.207.022 Haihua	Spring HH0628.207.022 Haihua	弹簧 HH0628.207.022 Haihua
2	Ось пальца	Locking-finger	锁紧轴

6	HH0628.207.027 Haihua	axis HH0628.207.027 Haihua	HH0628.207.027 Haihua
2 7	Подвес для монтажа цилиндрической втулки HH11309.19.02.00.313 Haihua	Suspension for mounting the cylindrical bushing HH11309.19.02.00. 313 Haihua	悬架, 用于安装圆柱 衬套 HH11309.19.02.00. 313 Haihua
2 8	Гайка HH05.001.169	Nut HH05.001.169	螺母 HH05.001.169
2 9	Комплект шайб HH0628.207.007	Washer set HH0628.207.007	垫圈套装 HH0628.207.007
3 0	Винт отжимной HH73.248/F1600/F1300	Squeeze screw HH73.248/F1600/F1 300	挤出螺杆 HH73.248/F1600/F1 300
3 1	Втулка HH11309.05.020.157	Liner HH11309.05.020.15 7	缸套 HH11309.05.020.15 7